

# Universal Plus Quick Start Guide



[boschmixers.com/videos-resources](https://boschmixers.com/videos-resources)



**BOSCH®**  
Invented for life

FOR SUPPORT CONTACT US AT: ☎ 1-800-692-6724 ✉ [service@lchef.com](mailto:service@lchef.com)

## What is Included

- a. Motor Base
- b. High Speed Drive Cover
- c. Wire Whips
- d. Whip Drive
- e. Dough Hook
- f. Splash Ring & Lid
- g. Mixing Bowl
- h. Drive Shaft



Clean With Cloth Only

**DO NOT IMMERSE MOTOR BASE**



Dishwasher Safe



Dishwasher Safe



Hand Wash Only



Dishwasher Safe



Dishwasher Safe



Hand Wash Only

## First Use & Cleaning

There is a factory applied **WHITE FDA APPROVED FOOD GRADE LUBRICANT** on the spur gear & wire whips to ensure the best possible performance. **We recommend running the wire whips for a few moments before using the mixer.** Then wash off excess lubricant.



When washing your mixing bowl remove the driveshaft from the bowl. **Ensure that the drive socket remains dry.** Never place a wet bowl on the mixer base. If needed remove excess moisture from the drive socket with a dry cotton swab.



# Right Tool Right Speed

## Wire Whips

Speeds 1-4

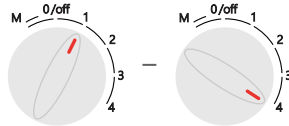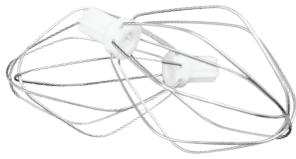


Only for use with thin batters & light cookie doughs.

When adding nuts, chocolate chips, raisins etc., switch to the Dough Hook.

## Dough Hook


Speeds 1-3

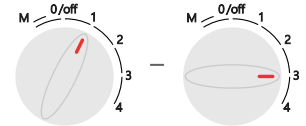

For use with all types of doughs.

## High Speed Drive


Speeds 1-4

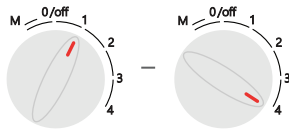

Optional attachments for the high speed drive include: **Bosch Blender**, **Bosch Food Processor**.

**Note:** When using the **Bottom Bowl Drive** the **High-Speed Drive Cover** must be securely in place.

## Momentary

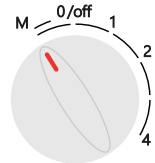

**M** is a spring action momentary/pulse position and provides full speed and power for the time it is held in position.

## Warranty

This guide has been created by NutriMill as a courtesy. NutriMill is the sole distributor for Bosch Universal Kitchen Machines & Accessories in North America. We provide service & warranty.

### Your mixer warranty:

#### 3 Year Warranty

Motor & Transmission

#### 1 Year Warranty

Attachments & Other Parts

For your warranty claim please be prepared to provide **proof of purchase**, **location of purchase**, **date of purchase**, & a brief **explanation of the issue**.

File a claim Online at:

**[boschmixers.com/warranty](https://boschmixers.com/warranty)**

## Important

**FOR SUPPORT CONTACT NUTRIMILL AT:**

☎ **1-800-692-6724**    ✉ **[service@nutrimill.com](mailto:service@nutrimill.com)**

**Please contact NutriMill directly for immediate service.** We will resolve any issues you might experience with your Bosch mixer or any included accessories.

NutriMill is the sole provider of service & warranty for the Bosch Universal Plus Mixer in North America. **File a claim Online at: [boschmixers.com/warranty](https://boschmixers.com/warranty)**

Bosch® is a registered trademark of Robert Bosch GmbH used with permission, in the promotion of Bosch Universal Kitchen Machines & accessories, by NutriMill. L'Chef LLC is registered to do business as NutriMill. NutriMill is a registered trademark of L'Chef LLC.