


# Arming/Disarming

Doors/Windows "Closed" (Black)  
Doors/Windows "Open" (Red)

System disarmed, ready to arm.

Press "Press to Arm" icon for arming choices.

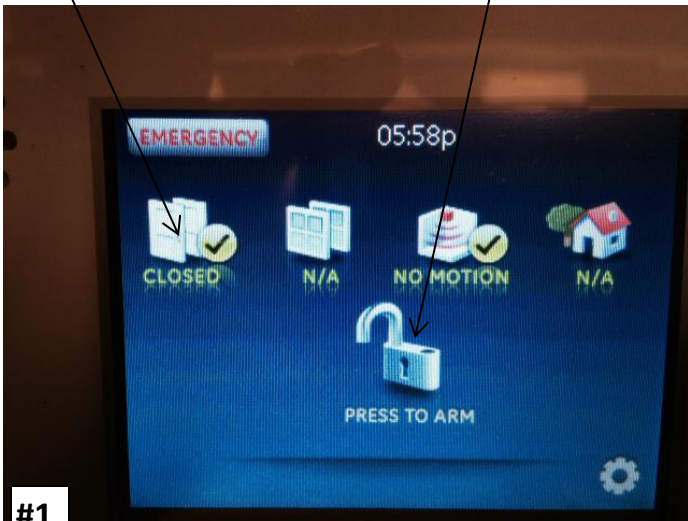

Press "Doors & Windows Only(Stay)" to arm the doors and windows only, no motion detector.

Press "Arm All(Away)" to arm the doors, windows and motion detector.

If you are staying home at night or going to bed, you can make the delay door "instant" by pressing "Off" beside "Entry Delay". Press this before Arming the security system.

You have a 60 second Exit delay and a 30 second Entrance delay. The Exit delay is accompanied by an audible beeping every 2 seconds as the panel counts down the 60 seconds to Arm. Press "Off" beside "Silent Exit" to eliminate the Exit beeping. This will double the Exit time from 60 seconds to 120 seconds. Upon entering the home through the delay door the panel will still start beeping to remind you to enter your code to shut it off.



Press "Press to Disarm" icon to disarm security system.

Enter 4-digit code to disarm security system.

