 


Emergency Buttons & Sounder


To access Police, Fire, and Medical buttons press "Emergency" button in upper left corner of the screen.

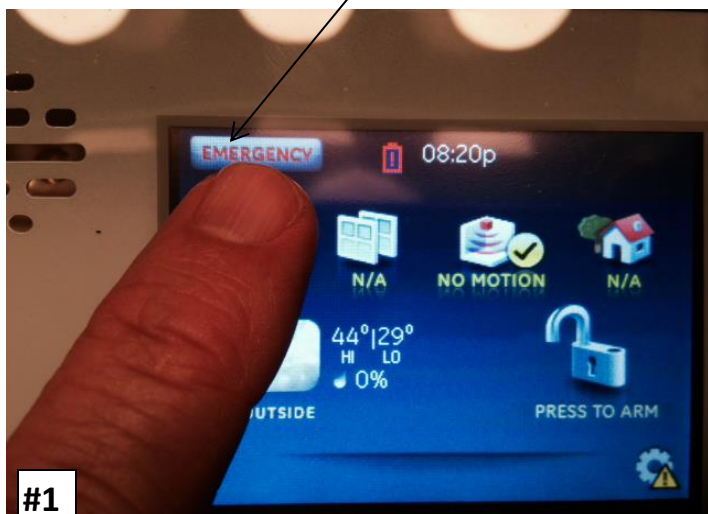


Panic(Medical), Police and Fire buttons are accessible for emergency response.



During an alarm, press the large, red "ALARM" button to silence the audible sounder and automatically switch to disarm screen to enter your code.

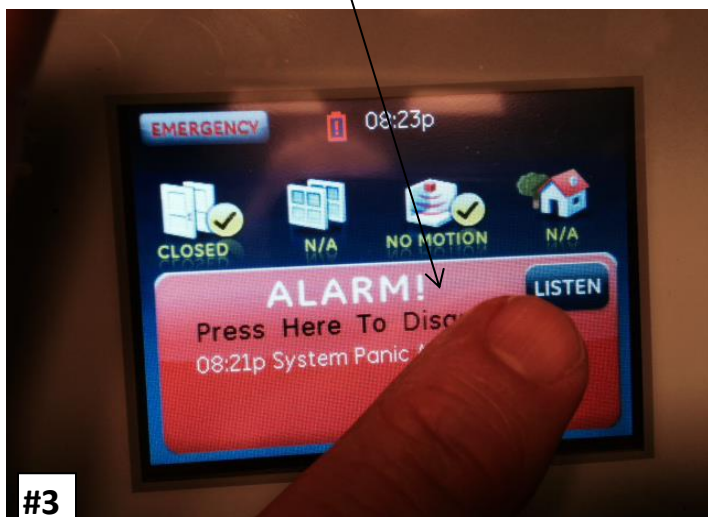

Enter your 4-digit code to disarm system and return to main screen.

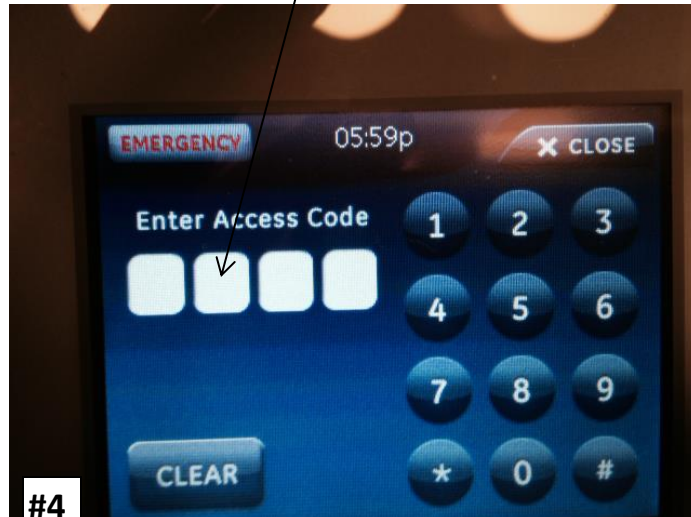

Keyfob Remote Control

Press "Lock" icon for 2 seconds to Arm security system in the "Stay" mode (doors and windows armed, motion detector is off). Press "Lock" icon a second time for 2 seconds to Arm security system in the "Away" mode (all devices including motion detector are armed).



Press "Unlock" icon for 2 seconds to Disarm security