

# Settings & Screen Options

To access panel settings and options such as voice and chime control, fault notification, event history, etc., press the Gear icon at the bottom right of the screen.



#1


Press the "Listen" button if a yellow triangle is visible in order to hear audio of faulted zones, low battery, etc. Press "Clear" to delete any messages.



#3

Turn Chime On or Off.

Press "Show" button to view Event History log

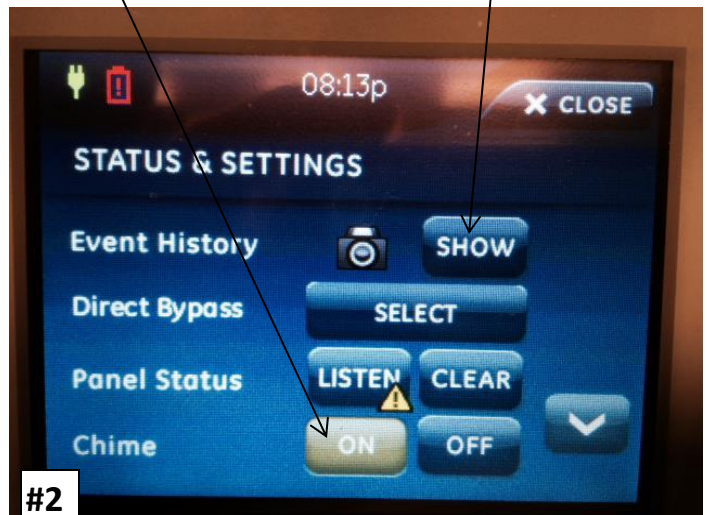

#2

Control Voice and Beep volume for chime and audio notifications.


Press Down/Up Arrow to advance to next screen or return to previous screen.



#4

Adjust "Brightness" of Touch Screen

Press "Close" tab to exit the current screen and return to the main screen.

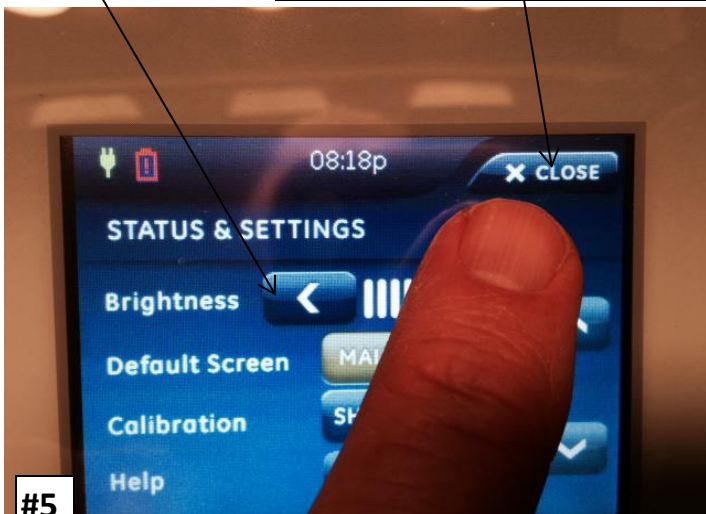

#5