


## How to connect the Moped Battery & How to Adjust Throttle for Higher Altitude



**NOTE:** The RED WIRE and RED FUSE WIRE need to connect to the RED TERMINAL on the BATTERY. The GREEN WIRE connects to the BLACK TERMINAL on the BATTERY.

**IF** you connect the RED WIRE and RED FUSE WIRE to the BLACK TERMINAL and the GREEN WIRE to the RED TERMINAL and start the motor, the FUSE will BLOW and will need REPLACE the FUSE and REWIRE the SYSTEM.

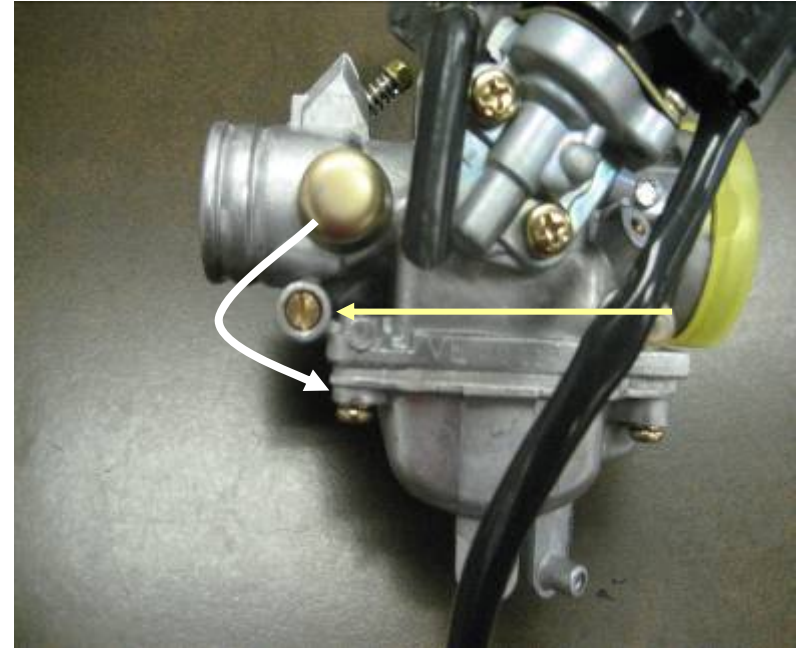

**NOTE:** At Higher altitude, you need to adjust the THROTTLE CONTROL (YELLOW ARROW). To properly adjust THROTTLE CONTROL, turn COUNTERCLOCKWISE 2 times. DIRECTION OF WHITE ARROW.