

CARDELLINI


150MM BALL TRI-HAT

Be sure all knobs are tight before mounting camera and after any adjustments.

Note: The knobs have different length bolts. If you need to remove knobs, please replace them in their proper locations. I find it works best to keep the knob handles positioned as shown in **Photo 1**.

CAUTION:

Should you need to remove the rubber feet from the legs for any reason, be careful. The ends of the legs can have sharp edges.

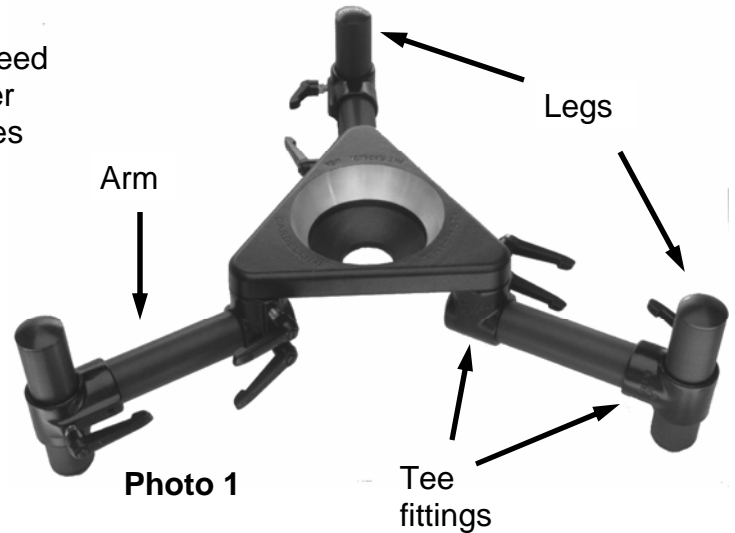

BAGGING THE TRI-HAT

Shot bags work best because they are compact. I hang them on the top of the legs rather than on the arms. This keeps them off the ground and as far outboard as possible.

SCREWING DOWN THE TRI-HAT

To screw down the Tri-Hat you can use 1 1/4" speedrail floor flanges. Lock the metal ends of the legs (not the rubber feet) into the flanges and use screws with washers through the holes in the flanges. **Photo 2**



MOUNTING ON TOP OF A LADDER

I find the best way is to remove two arms from the Tri-Hat and rotate the "Tee" fittings so you can get C-clamps inside of them. See **Photo 3**


Photo 3



OTHER APPLICATIONS

Because the components of the Tri-Hat are 1 1/4" pipe & fittings, the Ball mount can easily be incorporated into any 1 1/4" speedrail rig, such as in a condor, off the edge of a roof, etc.

Photo 4 & 5

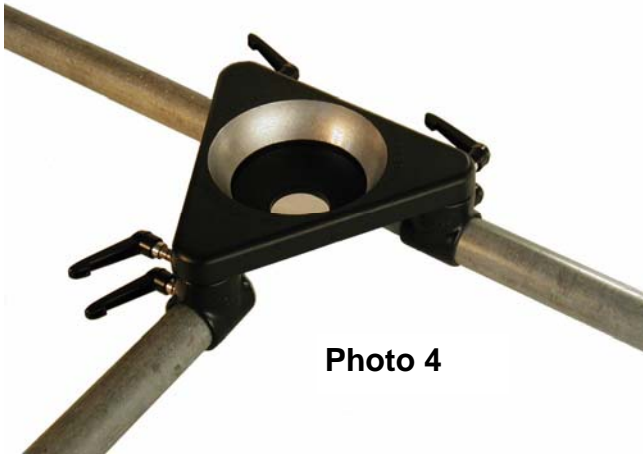

Note: All bolts on the Tri-Hat take a 3/16" hex wrench.