



FAST-FLOR

Installation Instructions

Fast-Flor tiles have 12 loops on two sides and 12 pegs on the other two sides. The pegs of one tile snap into the loops of the next. Ramp edges can be used around the perimeter to transition from the sub-floor to the tile.

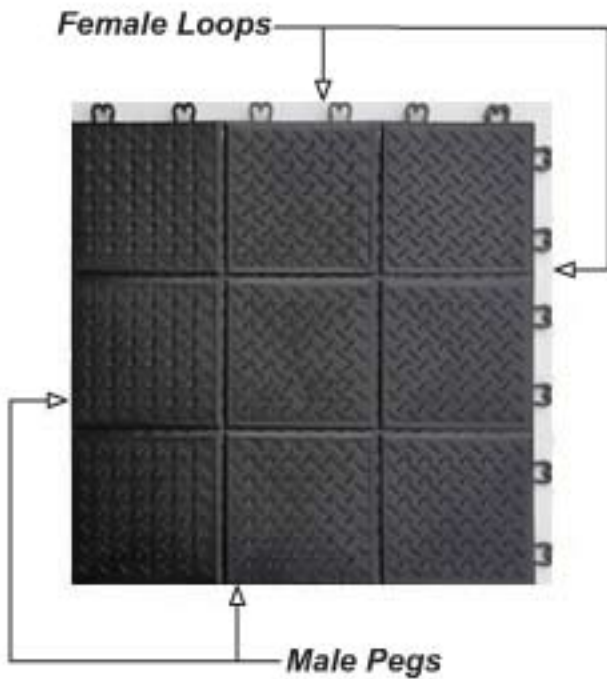


Fast-Flor Tile Configuration

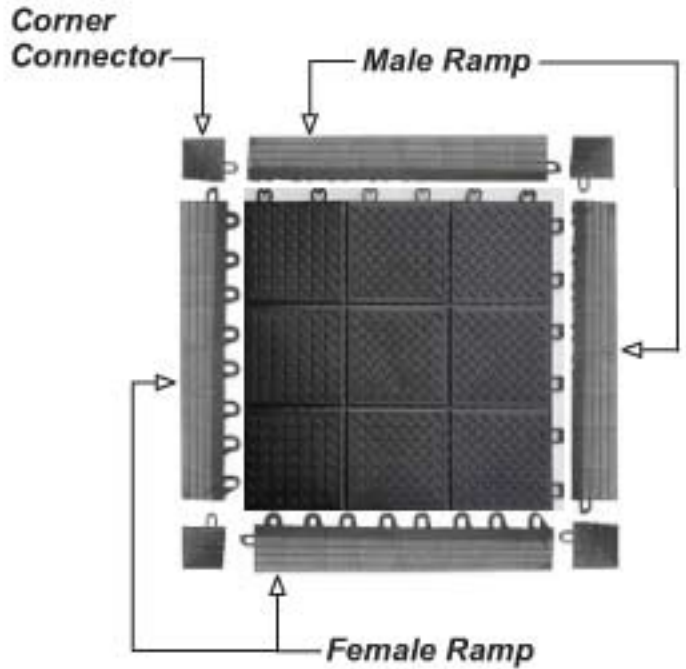

Using Ramp Edges

When laying the floor, all tiles must be oriented in the same direction as the first tile. In other words, always have the female loops going in the same direction.

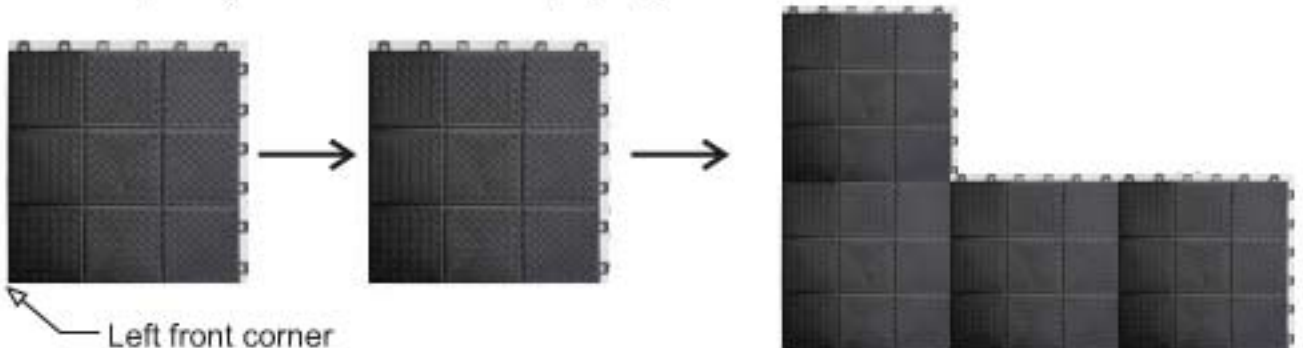

Begin installation in the left corner of the area to be covered. Be sure to orient the tiles as shown in the illustration (female loops facing up and to the right).

Working from left to right and front to back, snap next tile by inserting the male pegs into the female loops using a rubber mallet.