


# JAMAICA-150 INSTRUCTION OF THE INSTALLATION



## INSTALL BATTERY (ONE)

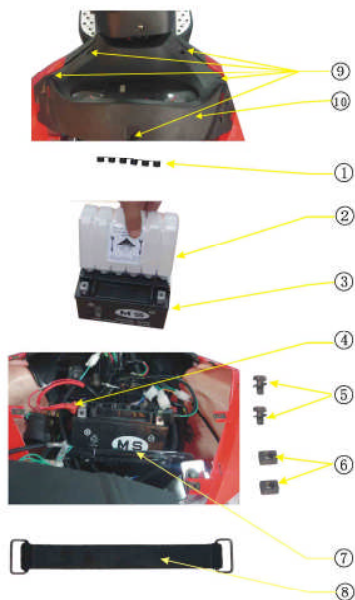


Description	Quantity	Specification	Remark	Twist power
① Battery sealed strip	1		In sundries box	
② Electrolyte	1		In sundries box	
③ Battery	1	12V7h	In sundries box	
④ Battery line			On motorcycle	
⑤ Battery bolt	2		In sundries box	
⑥ Battery nut	2		In sundries box	
⑦ Battery box	1		On motorcycle	
⑧ Battery strip	1		In sundries box	
⑨ Self-tapped Screw	5	ST4. 8×16	On motorcycle	
⑩ Meter subassembly	1		On motorcycle	

### Install step:

1. Dismantle ⑨, then take ⑩ down.
2. Inject ② into ③, referring the instruction of battery then cover ①. After finishing all steps in battery instruction, and inject electrolyte, Leave it thirty minutes.
3. Put ③ into ⑦, and fasten the electrode 4 by ⑤ and ⑥.
4. Fasten ③ on ⑦ by ⑧.

Attention: Connect electrode ④, notice red cord connect ⊕, green cord connect ⊖.

## INSTALL METER SUBASSEMBLY, LIGHT SUBASSEMBLY FRONT OF BODY (TWO)

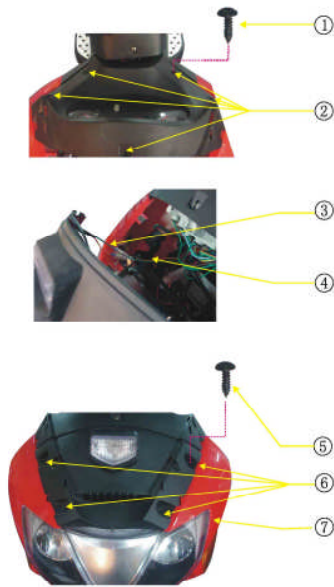

Description	Quantity	Specification	Remark	Twist power
① Self-tapped screw	5	ST4.8×16	On motorcycle	
② Meter subassembly	1		On motorcycle	
③ Light cord front of body	1		On motorcycle	
④ Sub-cable	1		On motorcycle	
⑤ Self-tapped screw	4	ST4.8×16	In sundries box	
⑥ Light subassembly front of body	1		In iron frame packing	
⑦ Body			On motorcycle	

### Install step:

1. Put ② on the original place, and fasten on ⑦ by ⑤ and ①.

2. Connect ③ to ④.

3. Fix ⑥ as the drawing place, and fasten ⑥ on ⑦ by ④ and ⑤.

Attention: Connect ③ to ④, green cable connect green, orange cable connect orange.


## INSTALL REARVIEW MIRROR (THREE)



Description	Quantity	Specification	Remark	Twist power
① Rearview mirror	2		In ④	
② Front of body	1		On motorcycle	

1. Adjust the point view of the rearview mirror, then fix ① on ② by ①'s self-tapped screw,

## INSTALL WINDSHIELD AND WINDSHIELD'S LAYER (FOUR)

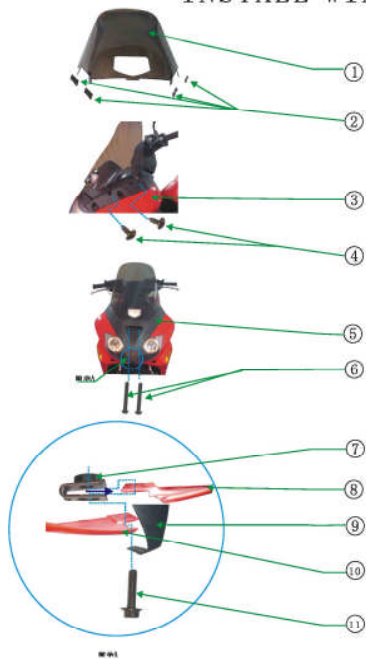

Description	Quantity	Specification	Remark	Twist power
① Windshield	1	ST4.8×16	On motorcycle	
② Plywood	4		In sundries box	
③ Front cover	1		On motorcycle	
④ Self-tapped screw	4	ST4.8×16	In sundries box	
⑤ Windshield layer	1		In sundries box	
⑥ Bolt	2	M6×45	In sundries box	
⑦ M6 layer	2		In sundries box	
⑧ Front cover	1		On motorcycle	
⑨ Front cover	1		On motorcycle	
⑩ Windshield layer			On motorcycle	
⑪ Bolt	1	M6×25	In sundries box	

1. Block ② into ①, fasten ① on ③ by ④.

2. Put ⑤ on ③.

3. Fasten ⑤ on ③ by ⑥.

4. Block ⑦ into ⑧ as drawing's black arrowhead way

5. Through ⑨ ⑩ ⑧ ⑦ in turn by ⑪, then fasten.

Attention: Put ⑤ on ③ as drawing, ⑤ must insert ③'s slot.

Pay attention to the clip way, after all clips inserting into ③'s slot, then push ⑤ up let it connect with ③ well.